


SCENTHD™

HOME FRAGRANCE SOLUTION

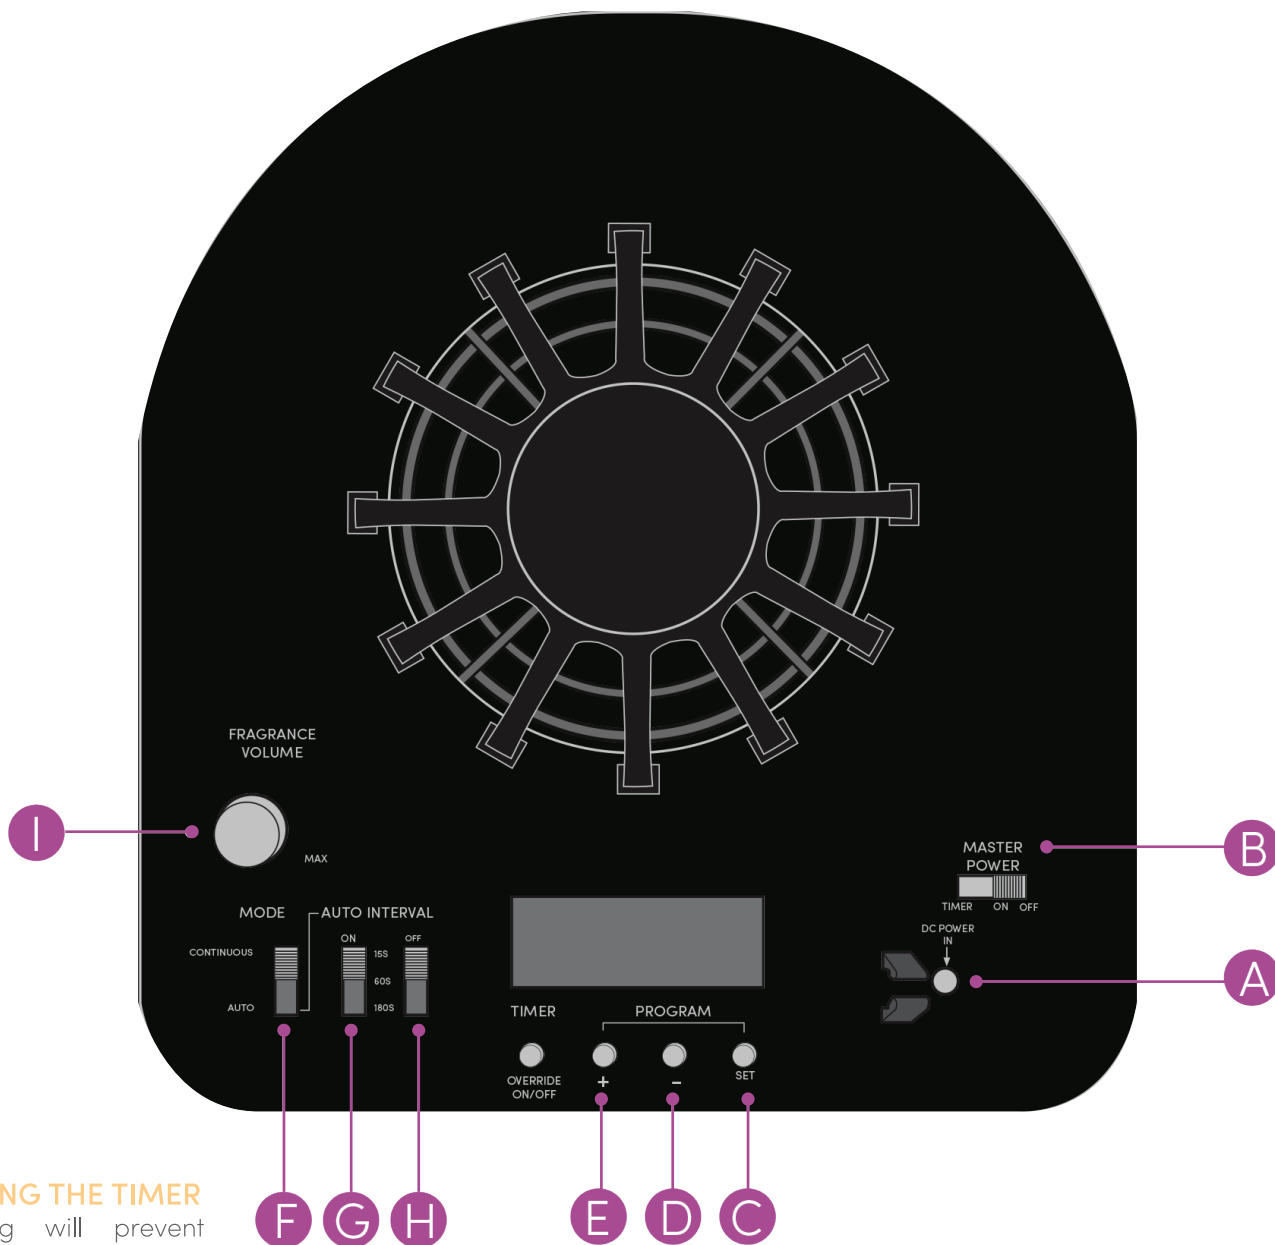

TIP: SETTING THE TIMER

This setting will prevent the system from operating while you are away from home or sleeping. This will help preserve the life of your fragrance cartridge.

SCENTHD

SETTING THE CLOCK

- 1** Plug in the power adapter into the DC POWER IN **A** on the back panel.
 - 2** Set MASTER POWER **B** to the TIMER setting to provide power for a specified amount of time.
 - 3** Set the time of day by pressing PROGRAM SET button **C** repeatedly until “AM/PM” begins to flash. Press + **D** or – **E** buttons to adjust the CURRENT time of day. Once selected, press PROGRAM SET button **C** once (“EVENT 1 ON” WILL APPEAR) The clock is now set.
-

FOR INTERVAL FRAGRANCING (Make sure you select your AM/PM timing preference)
EVENTS have a start (ON) and an end (OFF), which lets you control when and how long you fragrance.

EVENT 1

1 TO SET THE START TIME SET MASTER POWER **B** to the TIMER setting. Press and release PROGRAM SET button **C** repeatedly until “EVENT 1 ON” flashes. To schedule your “EVENT 1 ON” fragrancng, press + **D** or – **E** buttons to set the start time.

2 TO SET THE END TIME, Press PROGRAM SET button **C** repeatedly until “EVENT 1 OFF” flashes. To schedule your “EVENT 1 OFF” fragrancng, press + **D** or – **E** buttons to set the end time. Set-up for “EVENT 1”, is now complete.

EVENT 2

3 TO SET THE START TIME SET MASTER POWER **B** to the TIMER setting. Press and release PROGRAM SET button **C** repeatedly until “EVENT 2 ON” flashes. To schedule your “EVENT 2 ON” fragrancng, press + **D** or – **E** buttons to set the start time.

4 TO SET THE END TIME, Press PROGRAM SET button **C** repeatedly until “EVENT 2 OFF” flashes. To schedule your “EVENT 2 OFF” fragrancng, press + **D** or – **E** buttons to set the end time. Set-up for “EVENT 2”, is now complete.

ACTIVE FRAGRANCING

You have 2 options for how you fragrance your space.

- 1** AUTO INTERVALS: Fragrances your space in intervals of 15s, 60s, 180s. (Recommended setting).
- 2** CONTINUOUS: Fragrances your space continuously.

AUTO INTERVALS

INTERVAL ON

- 1** Set AUTO **F** for limited interval fragrancing. Set AUTO INTERVAL **G** "ON", to your preferred 15s, 60s, 180s.

The AUTO INTERVAL **G** "ON" setting, adjusts the time of ACTIVE fragrancing.

INTERVAL OFF

- 2** Set AUTO INTERVAL **H** "OFF", to your preferred 15s, 60s, 180s.

The AUTO INTERVAL **H** "OFF" setting, adjusts the time of non-fragrancing.

CONTINUOUS

- 1** Set MASTER POWER **B** to the "ON" position. Set mode to CONTINUOUS **F** for constant fragrance.

NOTE: This setting will instruct the machine to continuously fragrance your space until you manually turn it off. It is recommended to use the AUTO INTERVAL "ON" **G** and "OFF" **H** to extend the life of your fragrance cartridge.

FRAGRANCE VOLUME

- 1** The red FRAGRANCE VOLUME knob **I** controls the speed of the SCENT HD fan and how far fragrance is projected. Start with the knob in the 12:00 position and adjust the knob as needed after one hour, if more or less fragrance is desired.